


Move Blocks Forward During Installation to Engage Shear Knobs (Typ.)

Free Draining Back Fill to Extend at Least 12" Behind Wall

Reinforced Grid Per Engineers Specifications (typ.)

**** PRELIMINARY -BLOCK LAYOUTS TO BE APPROVED BY ENGINEER****

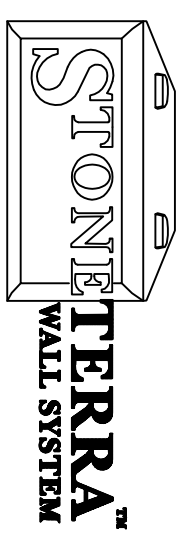

815 N.E. 172nd Ave.
 VANCOUVER, WA 98684
 800-377-3877 PH
 360-694-0281 FAX

TITLE: **Stoneterra - MSE Wall**

DRAWN BY: MLN

DATE: 11/16/2011
 SCALE: NTS

SHEET #: ST-01